

e. Beckmann

Montageanleitung für GFK Rutschen mit Welle

Artikelnummer: 220250 / 220260 / 220300

ACHTUNG!

Wir empfehlen, die Montage von einem Fachbetrieb durchführen zu lassen!

Lesen Sie sich vor Beginn der Montage diese Anleitung sorgfältig durch!

Gehen Sie Schritt für Schritt vor!

Halten Sie die Reihenfolge der einzelnen Schritte ein!

Andernfalls kann es zu Beschädigungen am Gerät kommen! Bei unsachgemäßer Montage kann der zuständige Sachverständige die Abnahme des gesamten Spielgerätes verweigern. Wird das Spielgerät durch unsachgemäße Montage beschädigt, ist der Hersteller nicht haftbar.

LIEFERUMFANG:

- 1 x Rutsche
- 2 x Bodenanker
- 1 x Turmanker
- 4 x Schraube, Mutter, Unterlegscheibe für Bodenanker
- 2 x Schraube zur Verbindung Rutsche mit Turmanker

MONTAGE

1. Prüfen Sie vor Beginn der Montage die Abstände zu benachbarten Geräten
2. Montieren Sie zuerst den Turmanker. Ziehen Sie die Schrauben nur lose an.
3. Stellen Sie die Rutsche auf das Podest und richten Sie die Rutsche aus. Es können jetzt die Befestigungslöcher auf dem Turm mit dem Turmanker markiert werden
4. Markieren Sie sich jetzt auch die Löcher für die Bodenanker.
5. Bohren Sie die Befestigungslöcher am Turm und heben sie die Löcher für die Bodenanker aus.
6. Montieren Sie die Bodenanker und ziehen Sie die Schrauben vom Turmanker fest.
7. Das Einstiegsteil mit der Plattform verschrauben.
8. Fundamente auffüllen mit Beton B25 gem. Skizze und verdichten. Rest mit Bodenmaterial auffüllen.
9. Die Montage ist damit abgeschlossen.

WARTUNG

Die Wartung richtet sich nach der allgemeinen Wartungsanleitung der Fa. E. Beckmann

e. Beckmann

Installation instructions for GPR Slides with waves

Reference: 220250 / 220260 / 220300

ATTENTION!

We suggest that the installation is made by a professional playground equipment installer!

Please read this manual carefully before you start the installation!

Install the equipment step by step!

Keep the correct order of the steps!

Otherwise the equipment might be damaged! Improper installation may cause the rejection of the authorised expert of the whole play equipment.

If the equipment is damaged by improper installation the manufacturer may reject the guarantee.

DELIVERED PARTS:


- 1 x Slide
- 2 x Ground anchor
- 1 x Tower anchor
- 4 x Bolt, nut, washer for ground anchor
- 2 x Bolt to connect slide and tower anchor

INSTALLATION

1. Before you start check all distances and free spaces to other equipment
2. Install the tower anchor first. Do not tighten the bolts yet.
3. Put the slide on top of the platform and check the alignment. In this step you can mark the holes for the tower connection using the tower anchor. Mark the holes for the ground anchors.
4. Drill the fixation holes in the tower and dig the holes for ground anchors.
5. Fix the ground anchors and tighten the bolts for tower anchor.
6. Connect the entrance part with the platform.
7. Fill up the basements with concrete type B25 and compress the concrete. Fill up remaining space with ground material.
8. Installation is now finished.

MAINTENANCE

Maintenance has to be done acc. to the common maintenance guide provided by company E. Beckmann

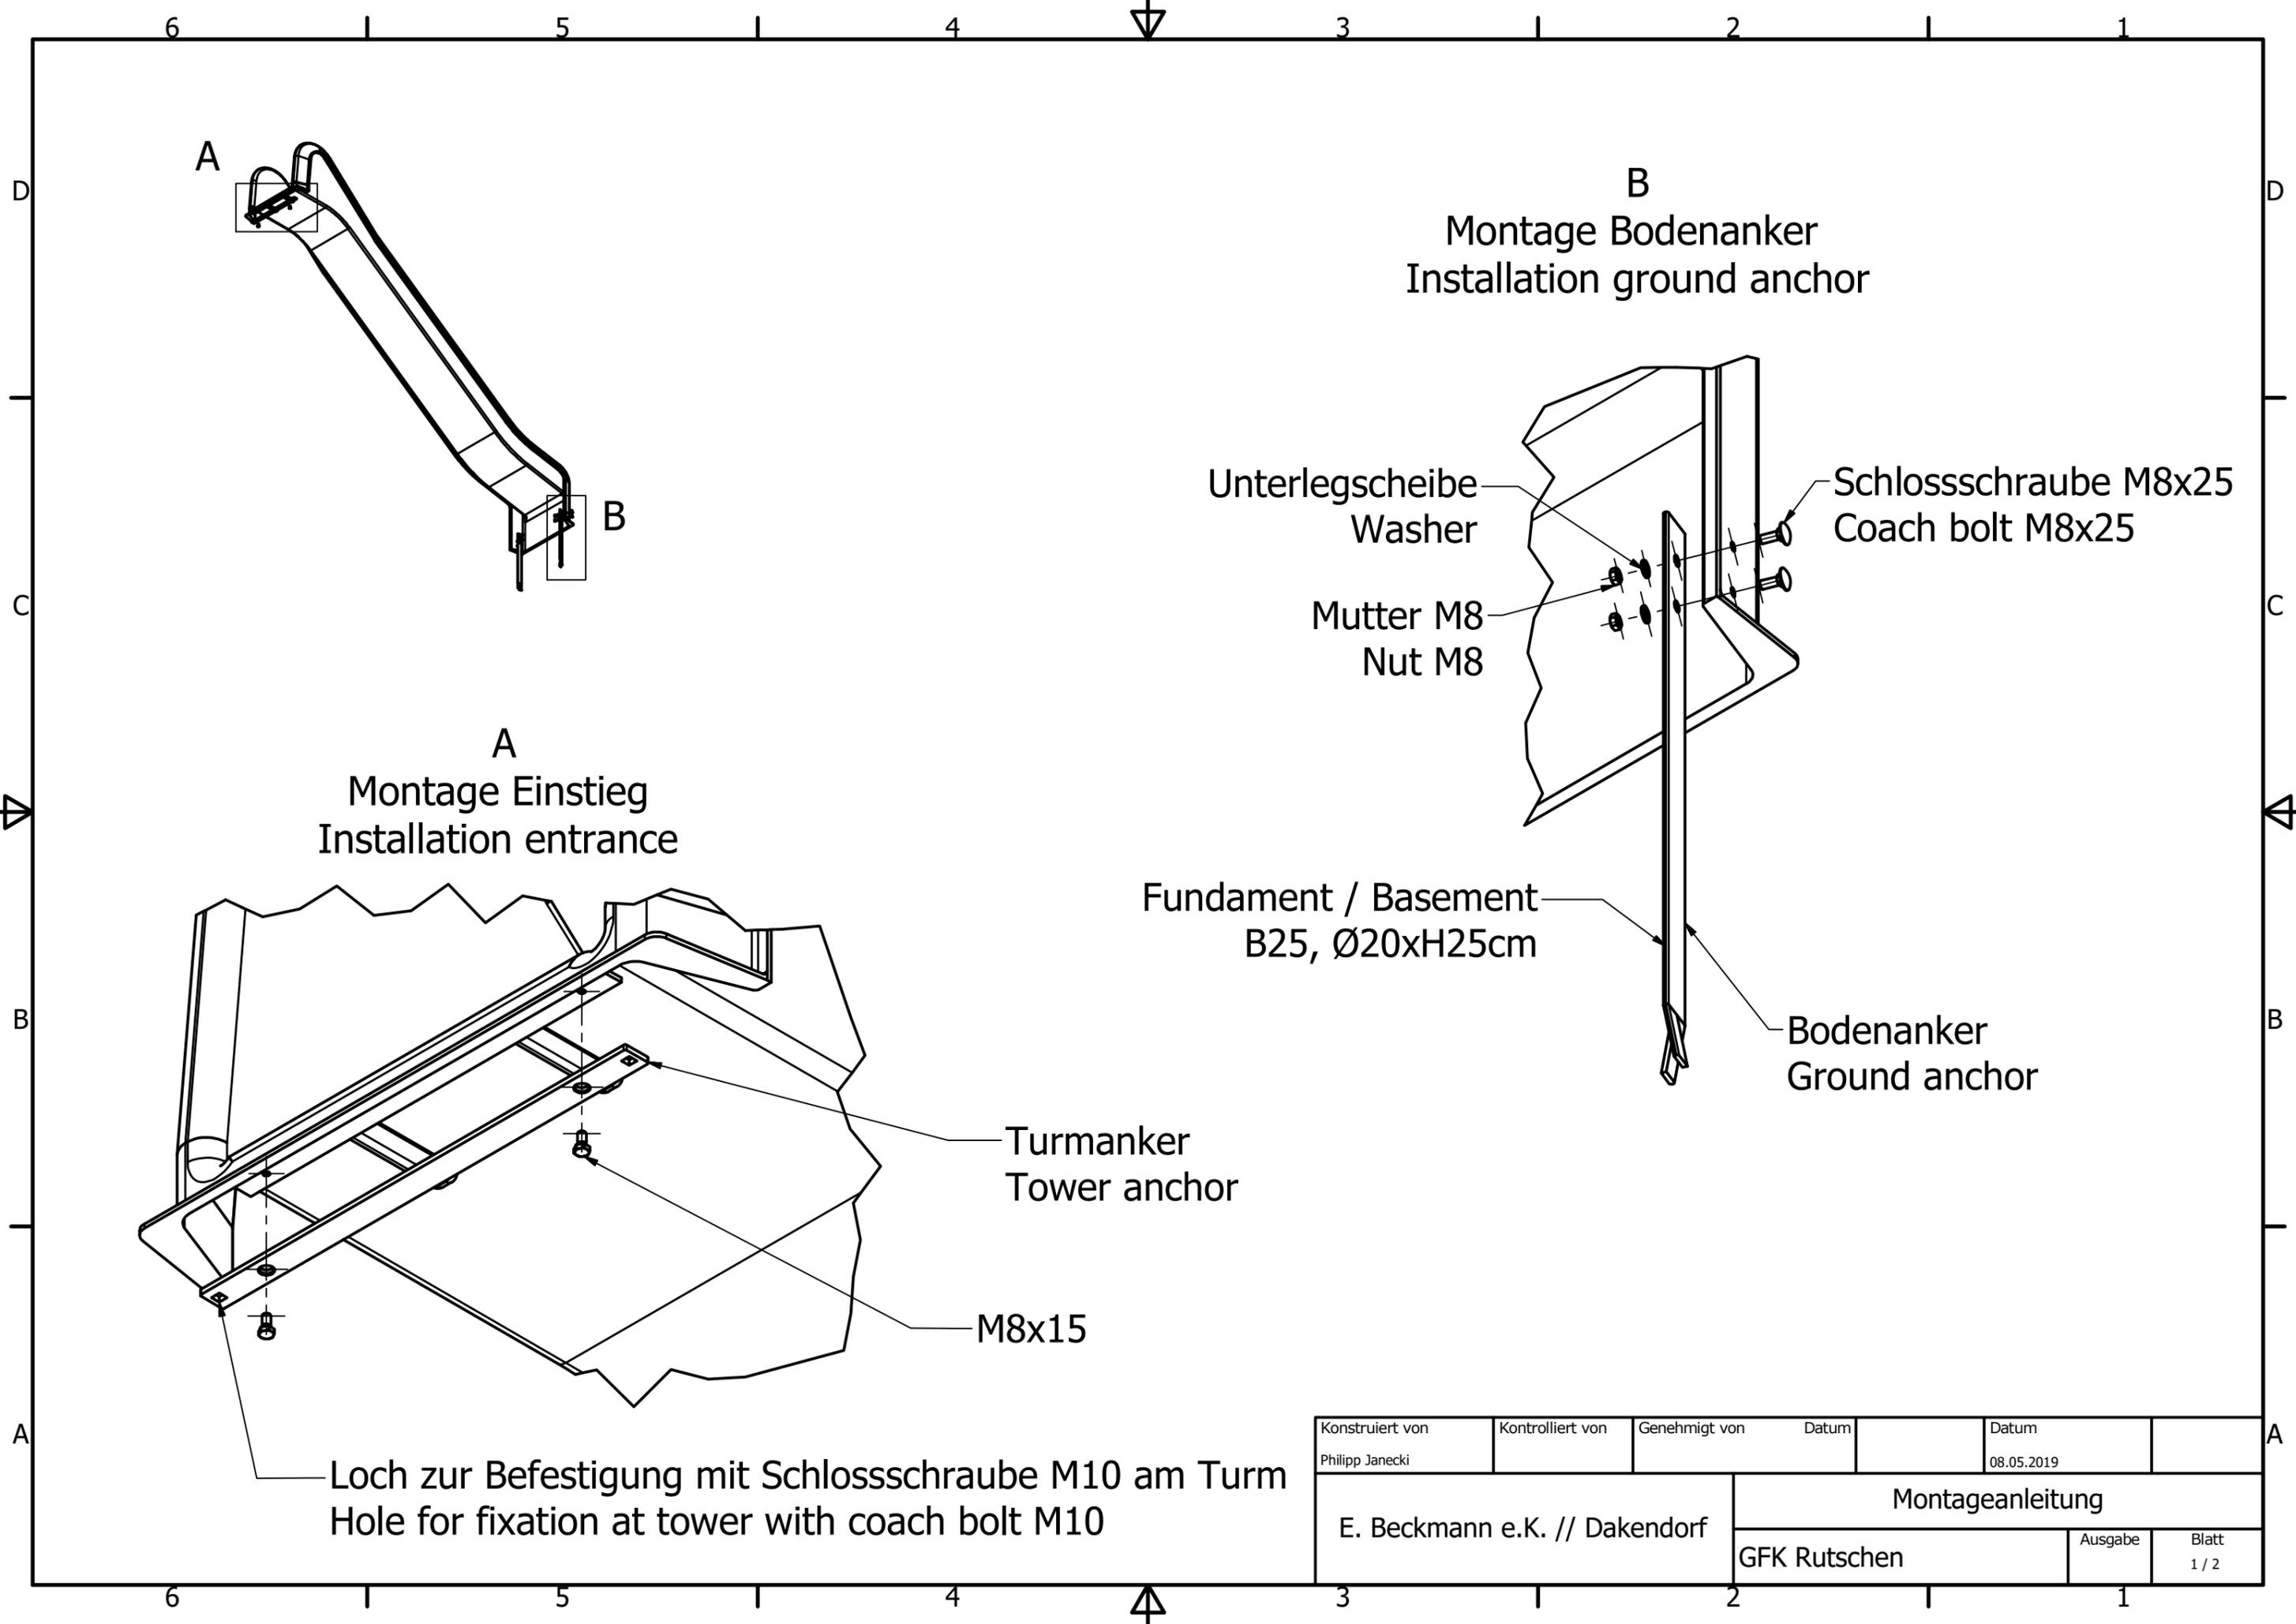

A
Montage Einstieg
Installation entrance

B
Montage Bodenanker
Installation ground anchor

Unterlegscheibe Washer
Schlossschraube M8x25
Coach bolt M8x25

Mutter M8
Nut M8

Fundament / Basement
B25, Ø20xH25cm


Bodenanker
Ground anchor

Turmanker
Tower anchor

M8x15

Loch zur Befestigung mit Schlossschraube M10 am Turm
Hole for fixation at tower with coach bolt M10

Konstruiert von Philipp Janecki	Kontrolliert von	Genehmigt von	Datum	Datum 08.05.2019	
E. Beckmann e.K. // Dakendorf			Montageanleitung		
			GFK Rutschen	Ausgabe	Blatt 1 / 2

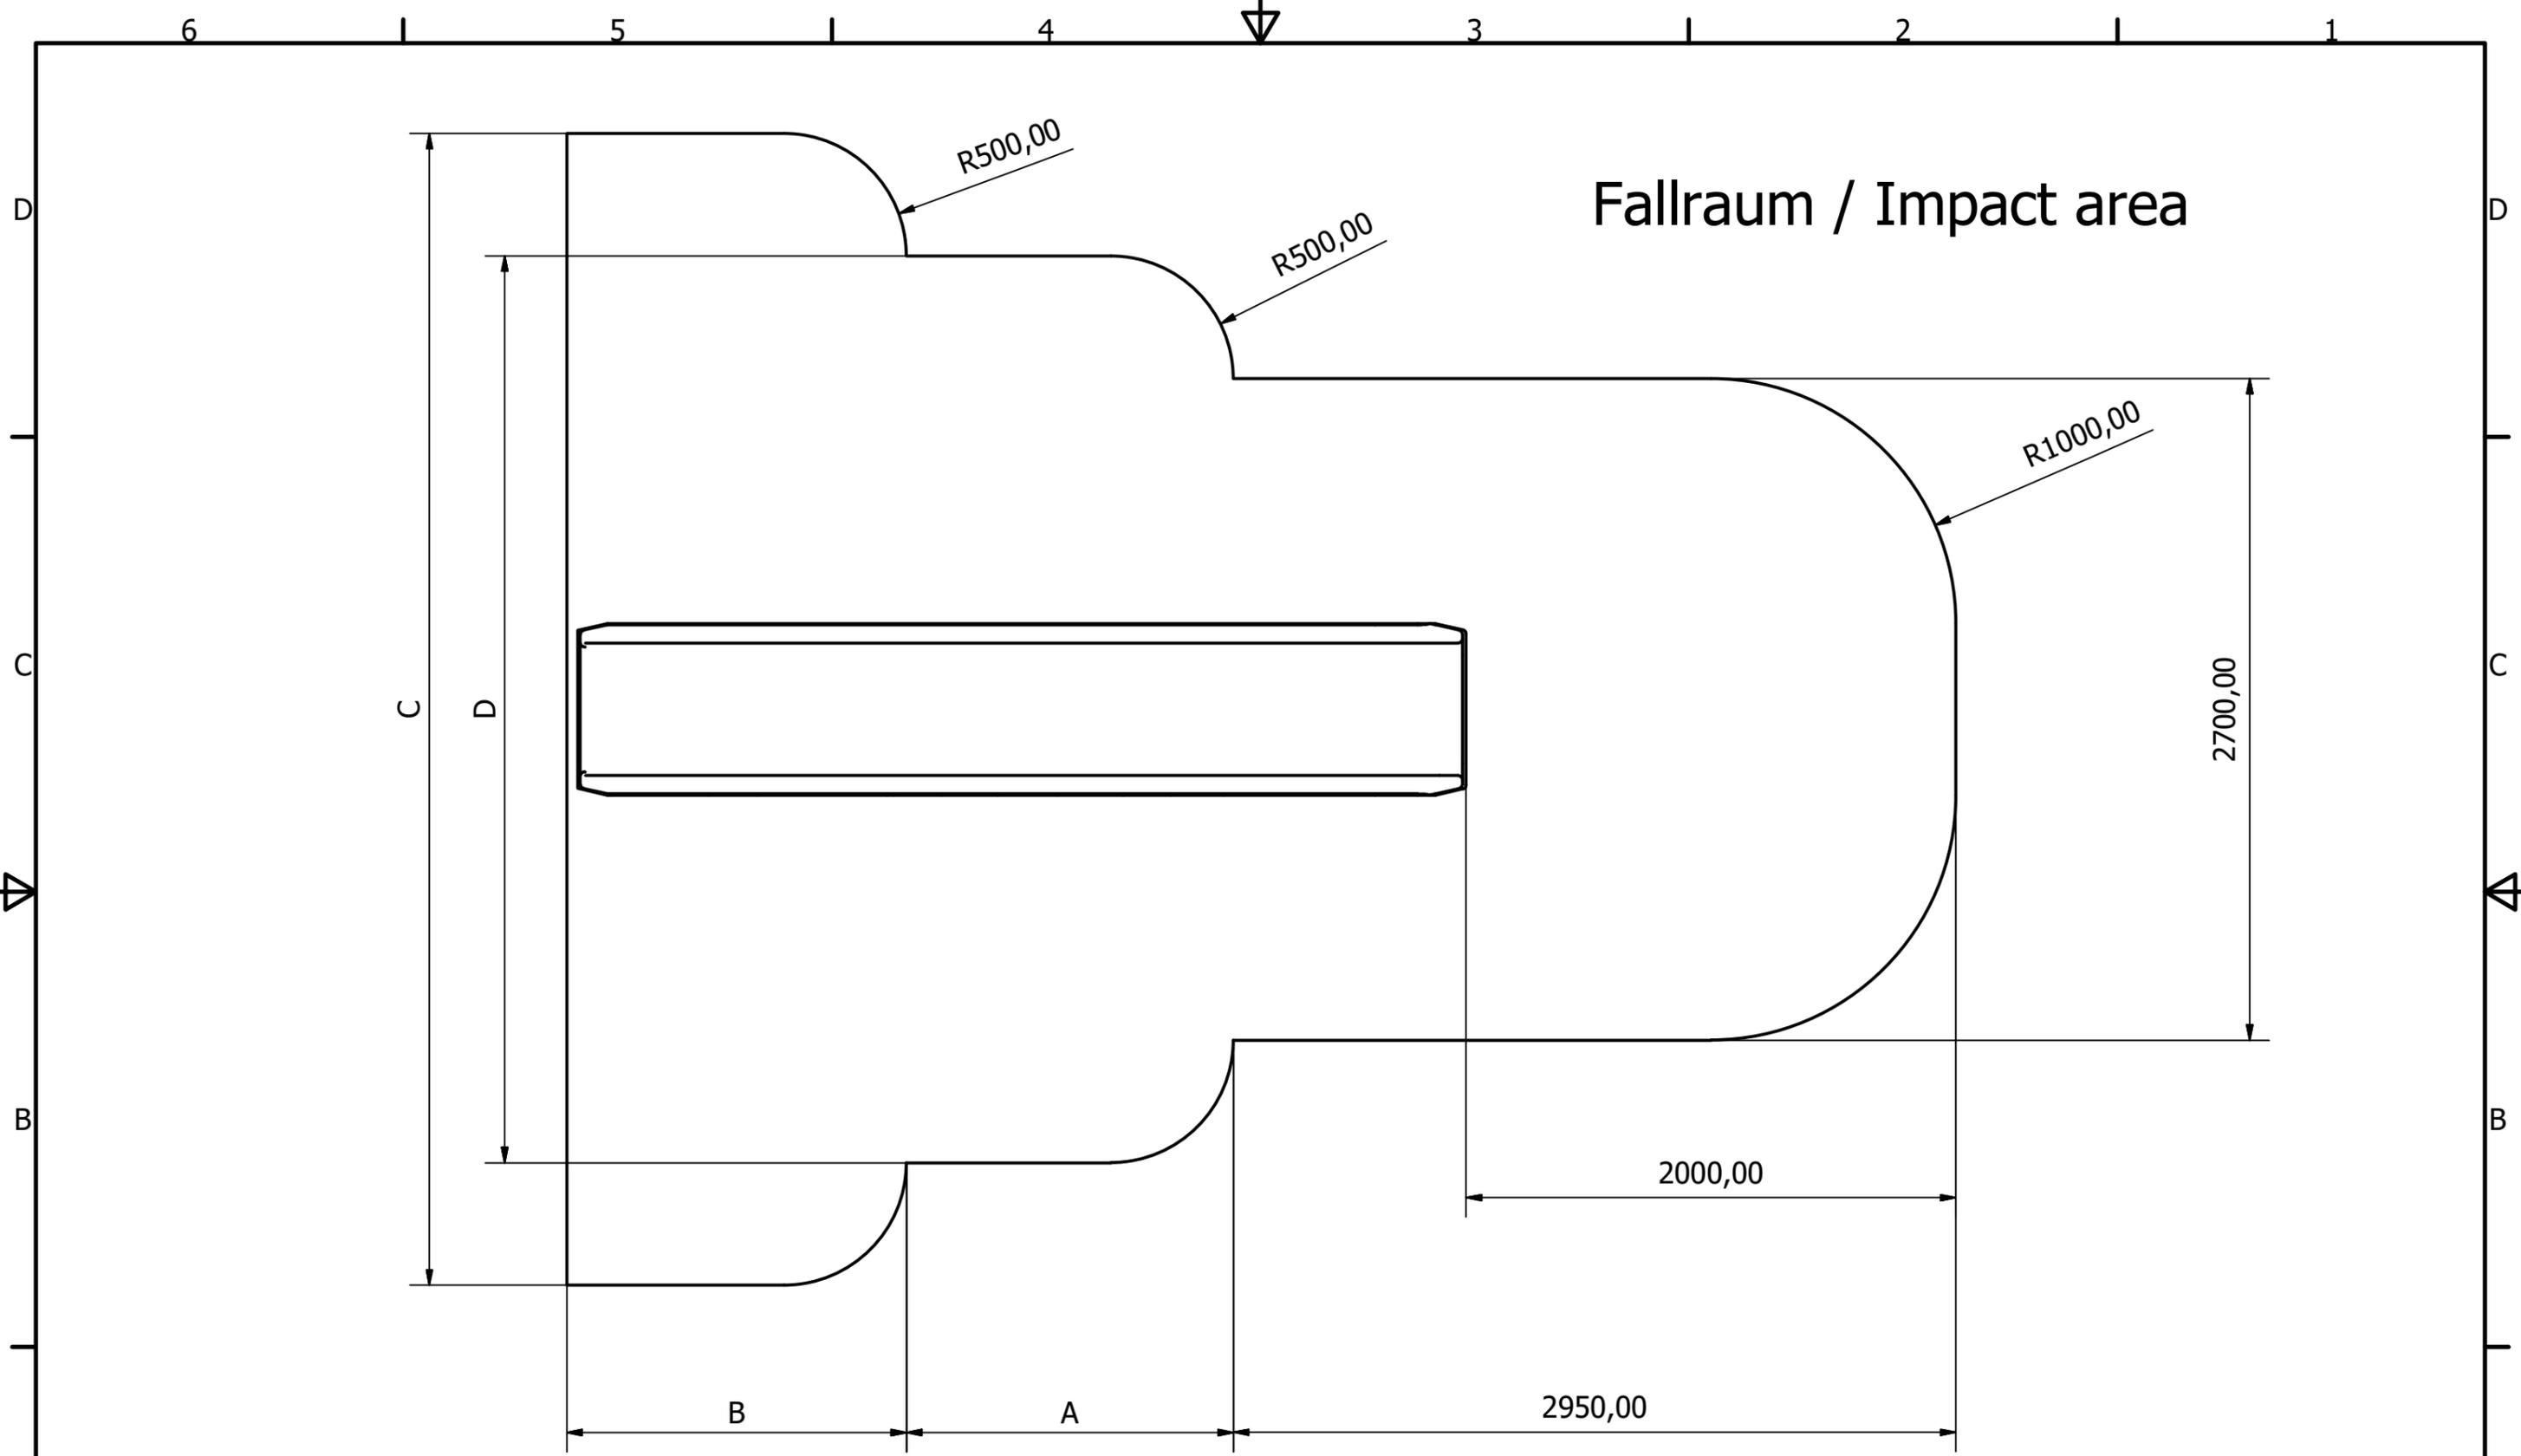

Abmessungen / Dimensions				
Artikelnr. / Reference no.	A	B	C	D
220300	1335,00 mm	1387,50 mm	4700,00 mm	3700,00 mm
220250	1895,00 mm	n.a.	n.a.	3700,00 mm
220260	2080,00 mm	n.a.	n.a.	3700,00 mm

Konstruiert von Philipp Janecki	Kontrolliert von	Genehmigt von	Datum	Datum 24.06.2019
E. Beckmann e.K. // Dakendorf			Montageanleitung	
			GFK Rutschen m. Welle	Blatt 1 / 1